



Cab # 11950 For
X710, X730, X734, X738, X739, X750, X754, X758
John Deere Garden Tractors

OPERATION - PARTS LIST - ASSEMBLY

IMPORTANT !
READ THIS MANUAL CAREFULLY AND KEEP FOR FUTURE REFERENCE

CAUTION !
REMOVE THE VINYL PANELS FOR TRANSPORT IN AN OPEN TRUCK OR TRAILER

WARNING !
**THIS CAB WILL NOT PROTECT OPERATOR FROM INJURIES CAUSED BY ROLLOVER,
COLLISION, OR OTHER ACCIDENTS**



WARNING

This cab is designed to provide foul weather protection only. It does not provide protection from noise, exhaust fumes, chemicals or injury from collision, or other accidents.

1. Do not operate machine in confined areas without proper ventilation
2. Thoroughly check area of operation before using machine
3. The cab adds height to the machine. Low tree limbs and other overhead structures that did not interfere with the operation of the machine before, may now be obstacles

IMPORTANT!

The doors are a part of the cab structure. The cab doors should always be closed during use to prevent damage to the cab frame.

MAINTENANCE INSTRUCTIONS

Periodically check all bolts to see that they are tight. If bolts become loose, failure of cab parts may occur.

Door latches and hinges should be lubricated with light machine oil for proper operation.

**DO NOT CLEAN THE CLEAR PLASTIC WINDOWS WHEN THE PLASTIC IS DRY.
THE CLEAR PLASTIC WILL SCRATCH.**

Avoid contact with plastic windows. Keep plastic windows clean by washing them with clear running water and rubbing with your bare hands, only. The use of a rag, sponge or brush will scratch the plastic. Liquid soap may also be used for window cleaning. During freezing weather, an automotive windshield washer solvent may be used.

Use liquid soap and water to clean colored vinyl portions. Scrubbing with a brush or rag is also permitted on the colored vinyl portions

STORAGE INSTRUCTIONS

Prior to storage clean the windows and colored vinyl parts with a mild automotive detergent, rinse with clean water and allow to thoroughly dry, Store cab in a clean dry place out of direct sunlight. Avoid folding plastic windows.

READ THIS MANUAL COMPLETELY BEFORE BEGINNING INSTALLATION.

- The right side of the machine is determined from the operators seated position.
- Right Hand parts are identified with orange label.
- The words "bolt" will refer to a 1/4"x5/8" bolt and "lock nut" will refer to a 1/4" locknut unless specified otherwise.
- Do not tighten bolts during assembly unless instructed to do so.

For Replacement Parts and Accessories Contact:

Original Tractor Cab Co., Inc.

P.O. Box 97 6849 W. Front St.

Arlington, IN 46104

Phone 765-663-2214

Fax 765-663-2101

Email Sales@originalcab.com

Visit us on the web to see our other products.

www.originalcab.com

Cabs for Lawn Tractors, Garden Tractors, Compact Tractors, Snow Blowers, Utility Vehicles

Sunshades for Tractors, Mowers, & Utility Vehicles

LIMITED WARRANTY

COVERED BY WARRANTY

ORIGINAL TRACTOR CAB CO., INC., (the "Company") warrants to the owner that each new product listed below is merchantable and free of defects in workmanship and material.

During the warranty period, the dealer from whom the product was bought, or the Company, will provide, free of charge, parts and the shipping costs of parts necessary to correct any defect in workmanship and material.

WARRANTY PERIOD

The company products listed below are warranted for the stated period from the date of the original purchase:

- | | |
|--|--------|
| 1. Cabs for tractors and snow removal equipment | 1 Year |
| 2. Company manufactured accessories for above cabs | 1 Year |
| 3. Sunshades for lawn and garden tractors | 1 Year |
| 4. Repair parts | 1 Year |

OWNER'S RESPONSIBILITIES

The owner of a new Company manufactured product must do the following to qualify for warranty service:

1. Retain the original invoice or other proof of purchase to avoid unnecessary difficulties in determining eligibility for warranty work.
2. Notify the dealer from whom the product was bought, or the company, as soon as possible after discovery of a possible defect, and provide proof of original purchase.

To notify the company write to: Original Tractor Cab Co., Inc., P.O. Box 97, Arlington, IN 46104.

3. The owner may, upon notification by the Company, be required to return the defective part, or parts, to the Company for inspection and warranty service.

NOT COVERED BY WARRANTY

The following are not covered by this warranty:

1. Transportation charges to and from servicing dealer or the Company;
2. New products that have been subject to misuse, negligence or accident, or have been altered or repaired in a manner not authorized by the company;
3. Windshield wipers, lights, or accessories that are warranted separately by their respective manufacturers, except Company agrees to make available to the owner whatever warranty benefits may be made available to the Company by the manufacturers.

All implied warranties, except to the extent prohibited by any applicable law, shall have no greater duration than the warranty period for the applicable product, some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.


The Company's liability arising out of warranties representation, instructions, or defects from any abuse, shall be limited exclusively to repair or replacing parts under the condition in the warranty, and in no event will Company be liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have rights that vary from state to state.

Carton Contents: Cab #11950 for John Deere X700 Signature Series Garden Tractors

Key #	Part #	Qty.	Description
1	11943	2	Front Panel Leg Bracket
2	11944	1	Foot, RH
3	11945	1	Foot, LH
4	11946	1	Front Panel Brace, RH
5	11947	1	Front Panel Brace, LH
6	11948	1	Front Panel Leg, RH
7	11949	1	Front Panel Leg, LH
8	11951	1	Front Panel Cross Bar
9	11952	2	Foot Pocket Guard
10	10004	2	Front Post
11	10002	1	Top Frame Brace, RH
12	10003	1	Top Frame Brace, LH
13	11953	1	Rear Bracket, RH
14	11954	1	Rear Bracket, LH
15	10750	1	Rear Post, RH.
16	10751	1	Rear Post, LH
17	11955	2	Rear Boxing Post
18	10001	1	Top Frame
19	11956-B	1	Door, RH
20	11957	1	Door Bottom, RH
21	11958-B	1	Door, LH
22	11959	1	Door Bottom, LH
23	10749-B	1	Windshield
24	11960-B	1	Front Panel Vinyl
25	11961-B	1	Rear Curtain
26	11197	1	ABS Plastic Top
27	11243	1	Control Cable Bracket
	9820	1	Door Hardware Package
	11962	1	Hardware Package (contents listed below)
	786	24	1/4"-20 x 5/8" Bolt
	788	12	1/4"-20 x 3/4" Bolt
	730	36	1/4"-20 Two-Way Lock Nut
	3951	4	1/4" Flat Washer
	9903	6	1/4" x 1 1/4" x 3/16" Thick Fender Washer
	9404	4	M8-1.25 x 35mm Bolt
	8220	2	M8-1.25 x 20mm Bolt
	4902	2	Plastic Protectors

NOTE: Cab height is 80". Check Door clearance and other obstacles before assembly and use.

Identify the steel parts using the Carton Contents and the illustration below.

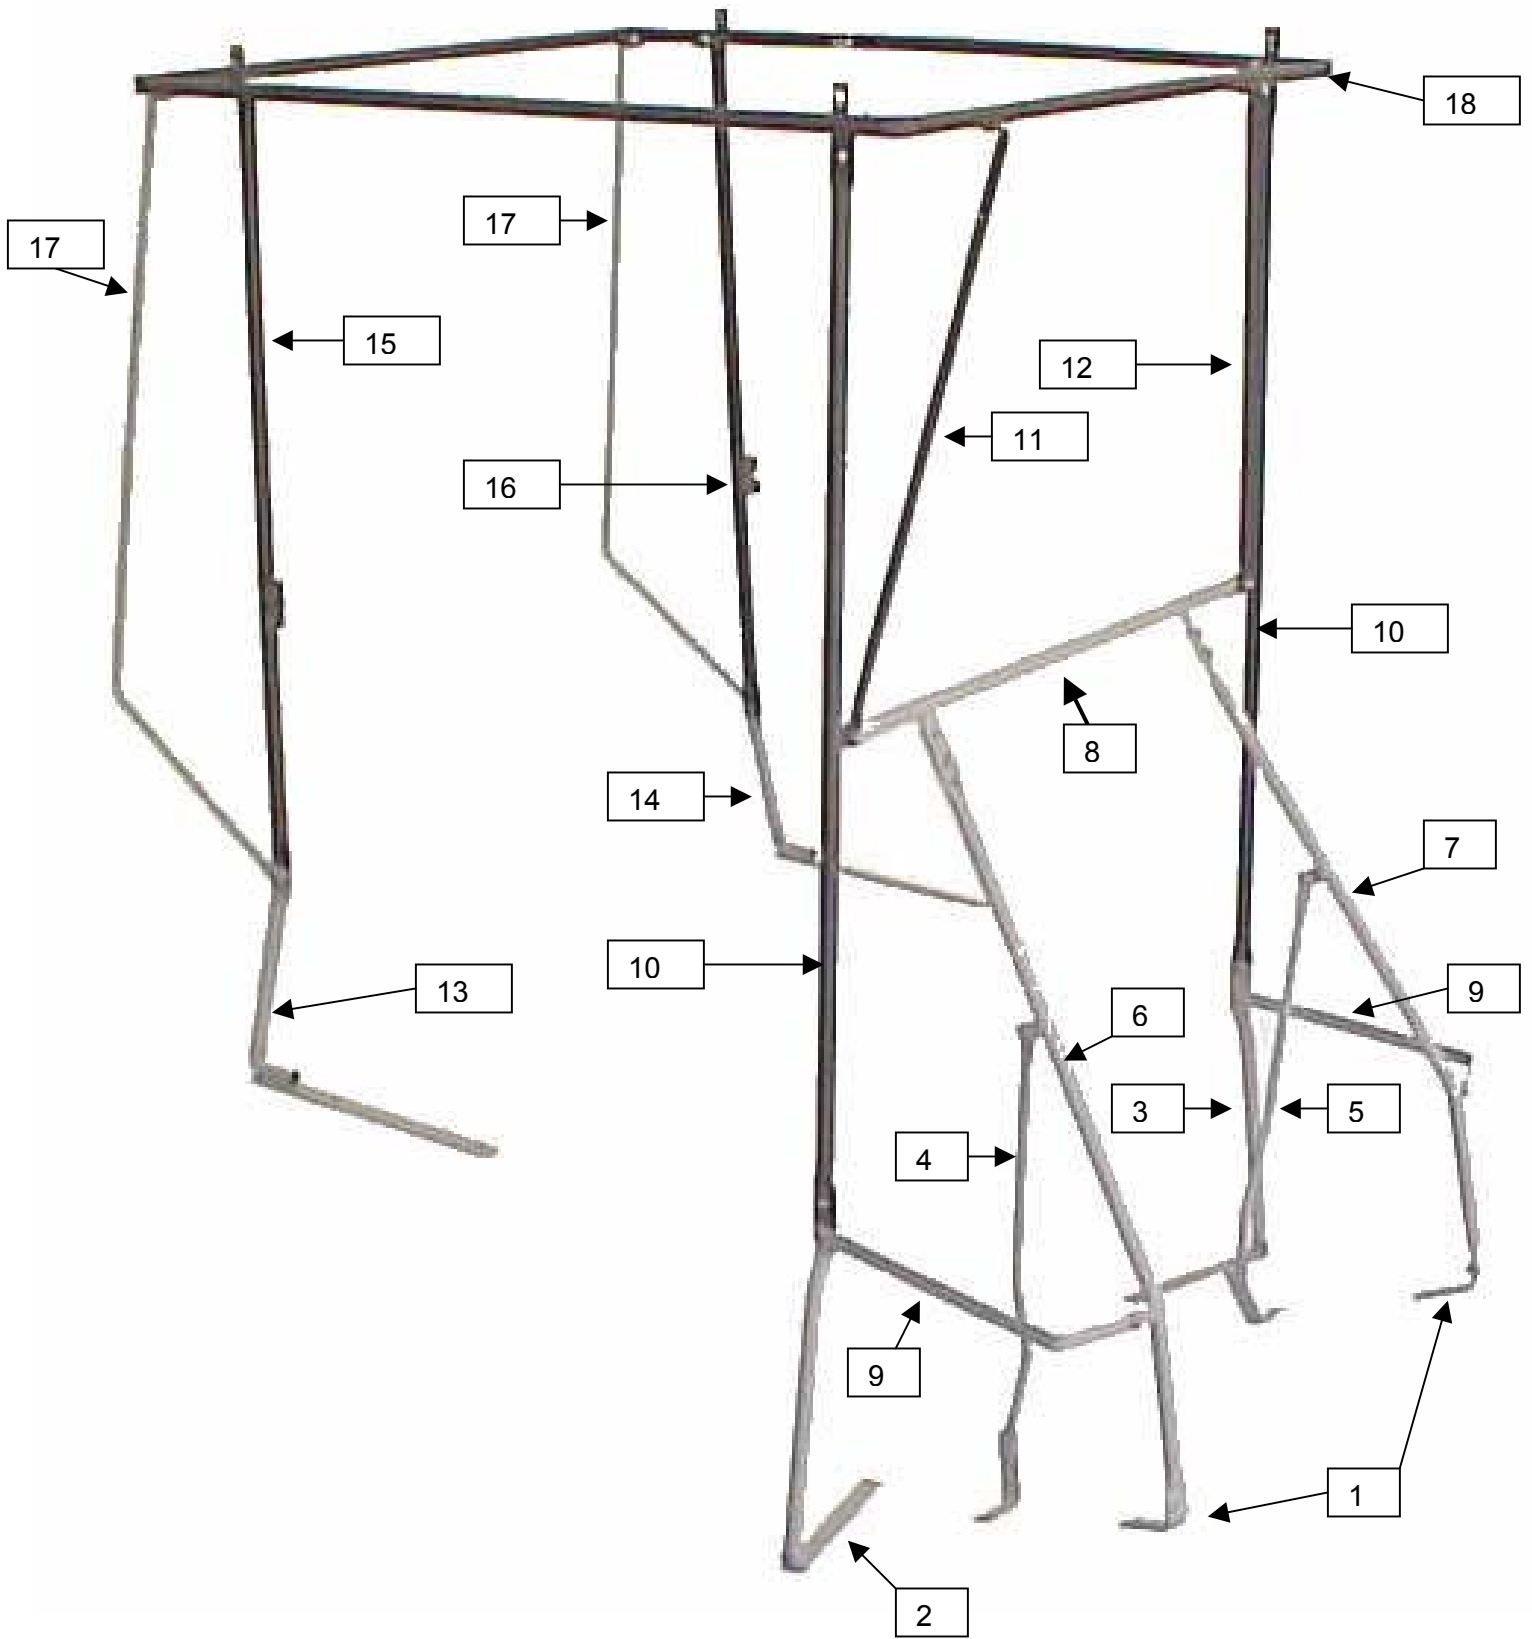

STEP 1; SEE FIGURE 1:

Prepare the tractor.

A. Pull the mats loose from the step plates by squeezing the buttons together and pulling up.

B. Cut the buttons off that are circled in the photo.

NOTE: The mats are removed for clarity. Removing the motion control pedals and differential lock pedal to remove the mats is not necessary to complete steps 1 & 2.

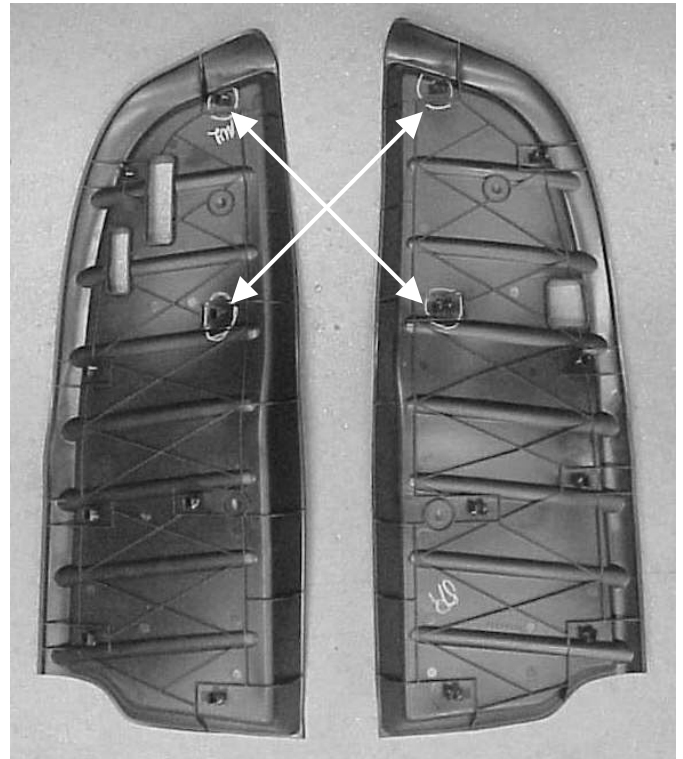


FIGURE 1

STEP 2; SEE FIGURE 2:

Install Front Panel Brackets (1). Foot right (2), left (3), Front Panel Brace right (4), and left (5).

A. Place a Front Panel Bracket on the step plate. Insert a 1/4" x 3/4" bolt down through the holes add a 1/4" fender washer and 1/4" lock nut. Do not tighten at this time.

B. Place the right Front Panel Brace on the step plate. Insert a 1/4" x 3/4" bolt down through the holes add a 1/4" fender washer and 1/4" lock nut. Do not tighten at this time.

C. Remove the bolt at Reference A. Place the right Foot on the step plate. Insert a M8 x 20mm bolt down through the holes at Reference A. Replace the 8mm nut. Do not tighten at this time.

D. Repeat on the left side.

NOTE: A hole will be drilled in the step plates for the other bolts to secure the Feet in step 10.

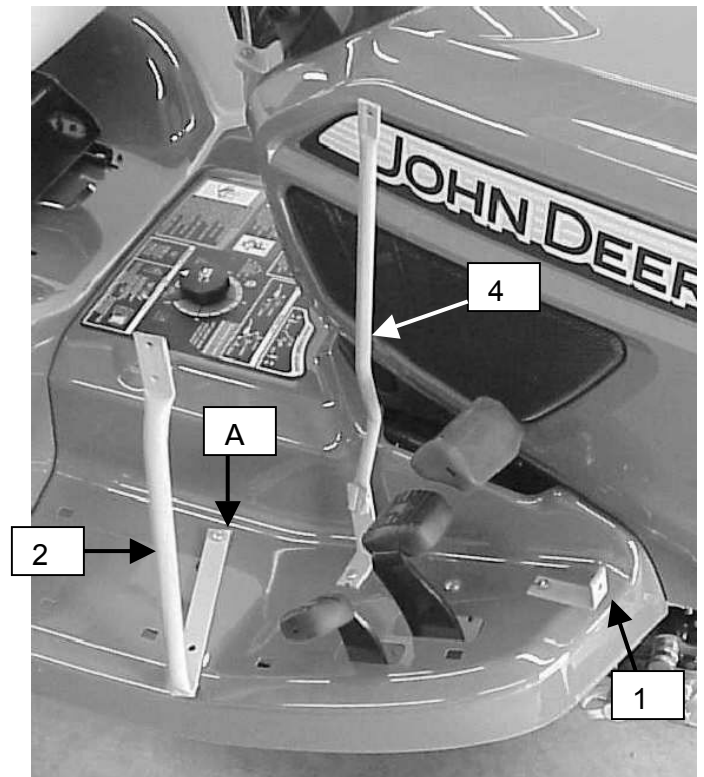


FIGURE 2

STEP 3; SEE FIGURE 3:

Install Front Panel Leg right (6), left (7) and the Foot Pocket Guards (9).

A. Attach the Front panel leg to the Front Panel Brace with a bolt inserted outward. Add a nut. Do not tighten at this time.

B. Insert a bolt rearward through the lower hole in the Leg and the front Panel Bracket. Add a nut. Do not tighten at this time.

C. Insert a bolt forward through the lower tab on the leg and a Foot Pocket Guard. Add a nut. Do not tighten at this time.

D. Repeat on the left side.



FIGURE 3

NOTE: If a snow thrower or blower with a remote spout cap kit is used, follow step 4.

STEP 4; SEE FIGURE 4:

Install Control Cable Bracket (27).

A. Attach the bracket onto the frame where the left Front Panel Brace bolts to the left Front Panel Leg. Do not tighten at this time.

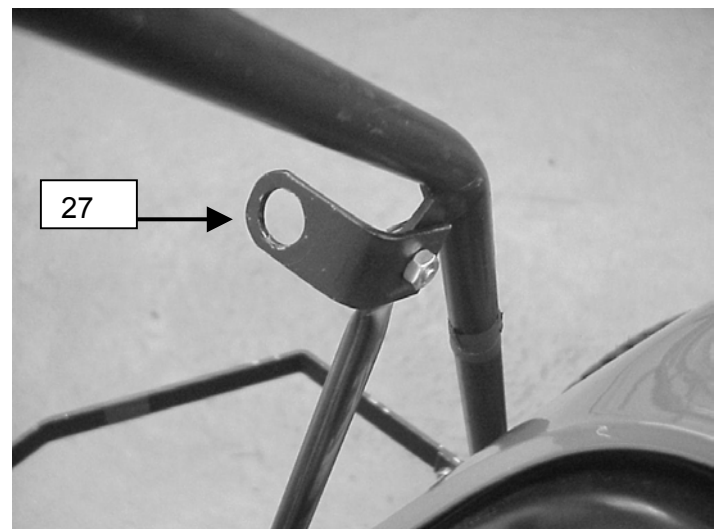


FIGURE 4

STEP 5; SEE FIGURE 5:

Install Front Panel Cross Bar (8).

- A.** Place the Cross Bar tabs in front of legs. Insert the four bolts to the rear. Add locknuts. Do not tighten at this time.
- B.** The flattened ends of the Cross Bar should be vertical when installed.

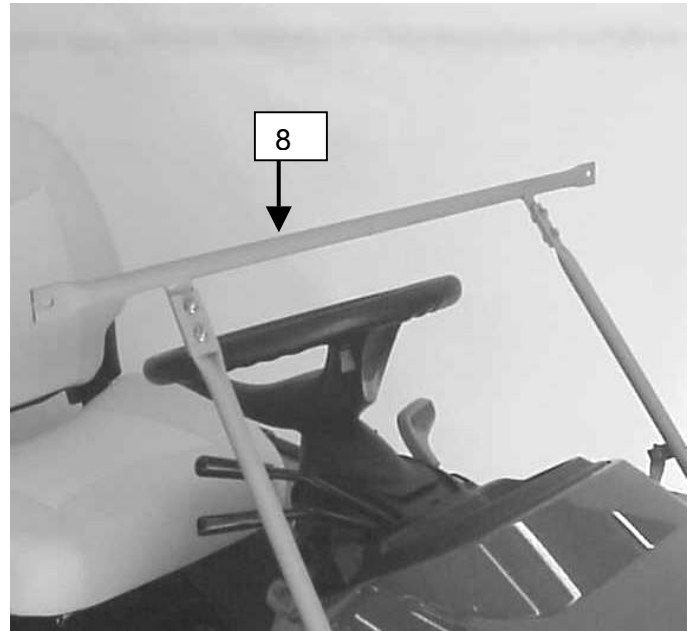


FIGURE 5

STEP 6; SEE FIGURE 6:

Install Front Posts (10) and Top Frame Brace right (11) & left (12).

NOTE: If you are installing the safety glass windshield omit Top Frame Braces.

NOTE: Bent ends of Top Frame Braces will point rearwards and lay flat when properly installed.

- A.** Insert a 1/4" x 3/4" bolt forward through the end of the Front Panel Cross Bar, the tab on the post and then the lower end of the right Top Frame Brace. Add a nut and tighten just enough to hold the brace up.
- B.** Insert a 1/4" x 3/4" bolt outward through the lower hole in the Foot, the lower hole in the post and then the hole in the Foot Pocket Guard. Add a nut. Do not tighten at this time.
- C.** Insert a bolt out through the upper hole in the Foot And Post. Place a door hinge from the Door Hardware Package over the bolt and add a nut. Do not tighten at this time.
- D.** Repeat the above steps on the left side.

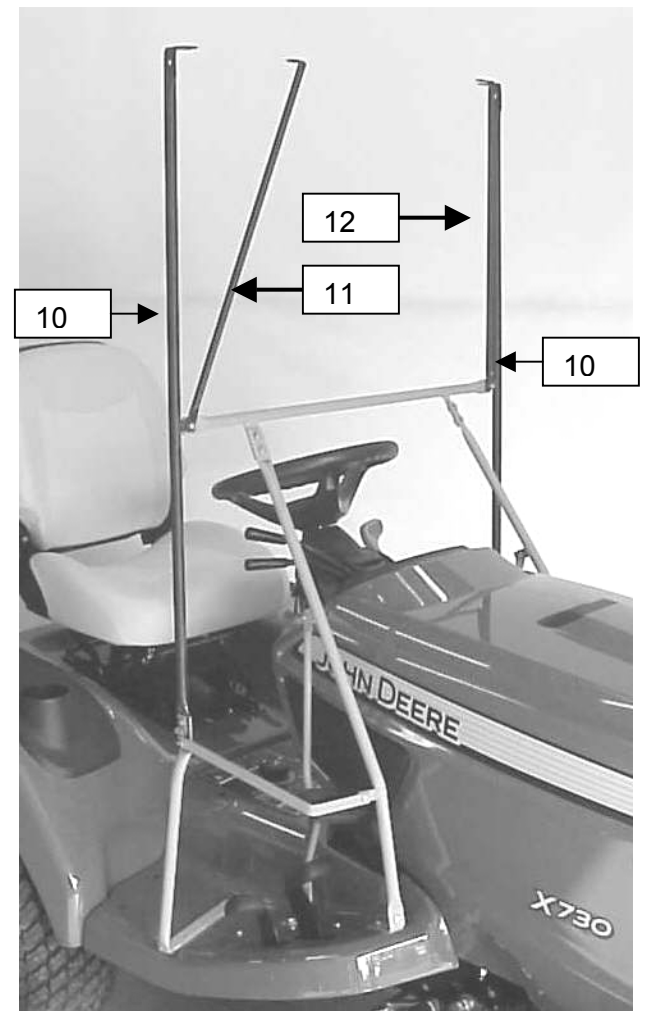


FIGURE 6

STEP 7; SEE FIGURE 7:

Install the right Rear Bracket (13) and left (14).

- A.** Remove the handle from the fender by removing the nuts and washers under the fender.
- B.** Attach the Bracket to the fender with two M8 x35mm bolts inserted down through the holes. Use the washers and the nuts from the handles under the fender to secure the Bracket. Tighten the bolts.
- C.** Repeat on the left side.

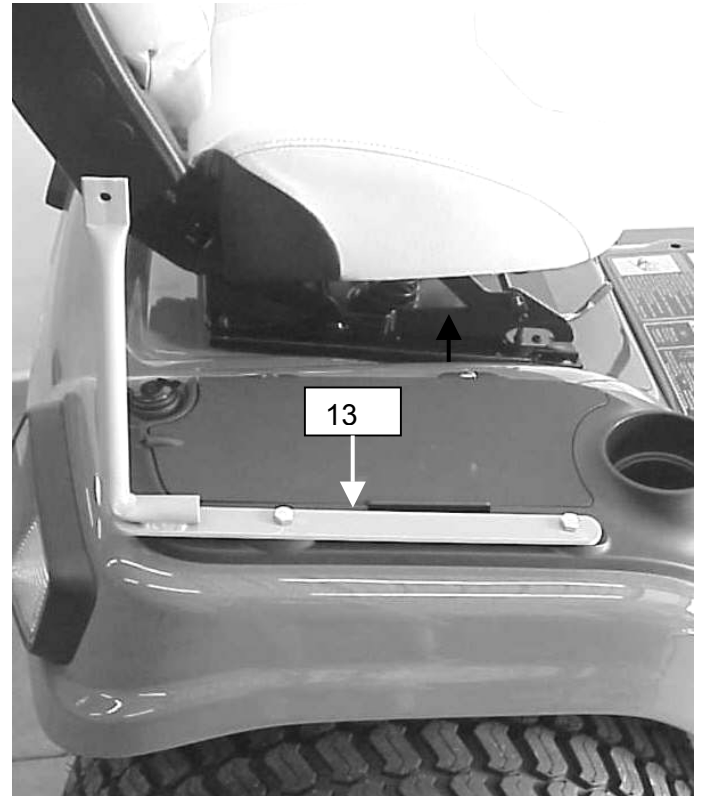


FIGURE 7

STEP 8; SEE FIGURE 8:

Install Rear Post right (15), left (16) and a Rear Boxing Posts (17).

- A.** Insert a 1/4" x 3/4" bolt outwards through the lower holes in the Rear Boxing Post, the hole in the Rear Bracket and then the lower hole in the Rear Post. Add a nut and tighten the bolt enough to hold the parts up.
- C.** Repeat on the left side.

NOTE: When properly installed Rear Post latch plates will face forward with the notch to the outside.

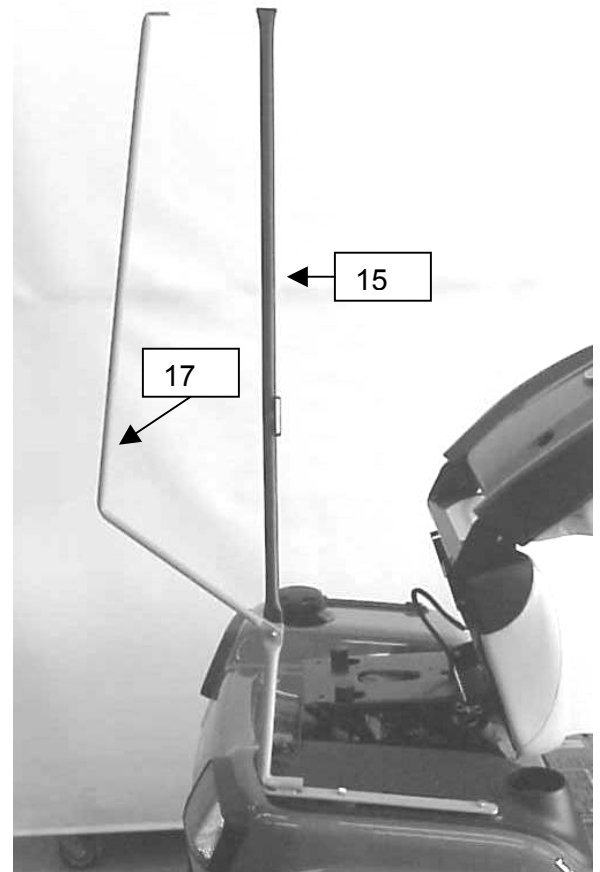


FIGURE 8

STEP 9; SEE FIGURE 9:

Install the Top Frame (18).

A. Use eight bolts inserted upward to attach the Top Frame to the bent ends of the Posts and Top Frame Braces. Add nuts. Do not tighten at this time.

B. Place a Plastic Protector over the bent ends of each rear post. (See inset)

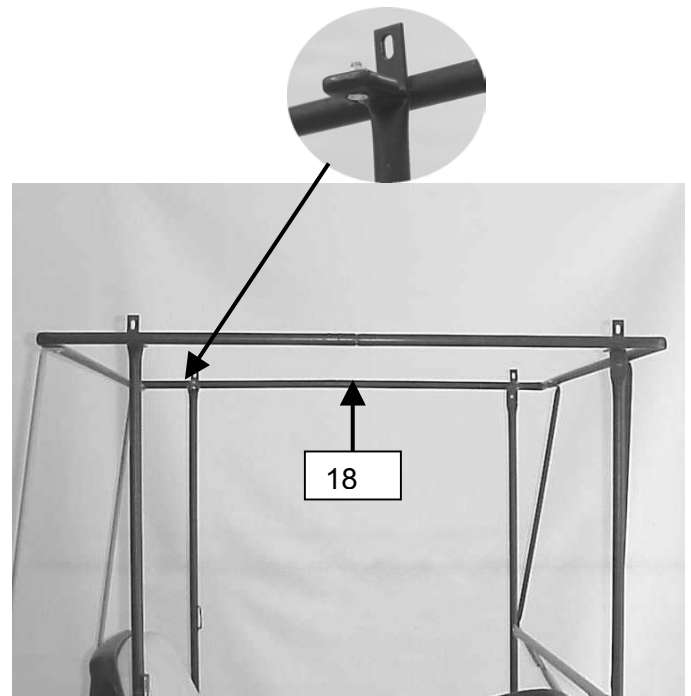
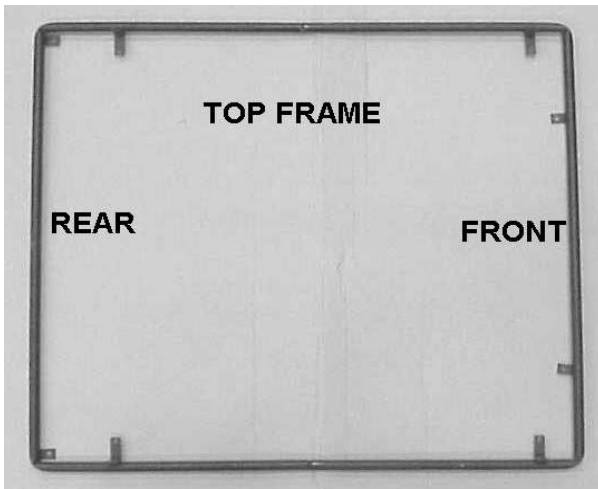


FIGURE 9

STEP 10; SEE FIGURE 10:

Install the Doors for frame / door alignment.

A. Follow the instructions in the Door Hardware Package to install the Door Bottoms and the Door Latches.

B. Install the Doors. Do not tighten top hinge bolts, as doors will be removed after alignment. Close and latch both Doors.

C. Tighten all framework bolts at this time.

D. Drill 1/4" or 9/32" holes through the step plate where the other holes in the Feet are located. Insert 1/4" x 3/4" bolts down through the other hole add a 1/4" fender washer and 1/4" lock nut. Tighten the bolt.

E. Remove the doors at the top hinge.

D. Reposition floor mats.



FIGURE 10

STEP 11; SEE FIGURE 11:

Connect Windshield (23) and Front Panel Vinyl (24).

A. Place the Windshield and Front Panel Vinyl face up on a clean flat surface. Press the hook and loop fastener together.

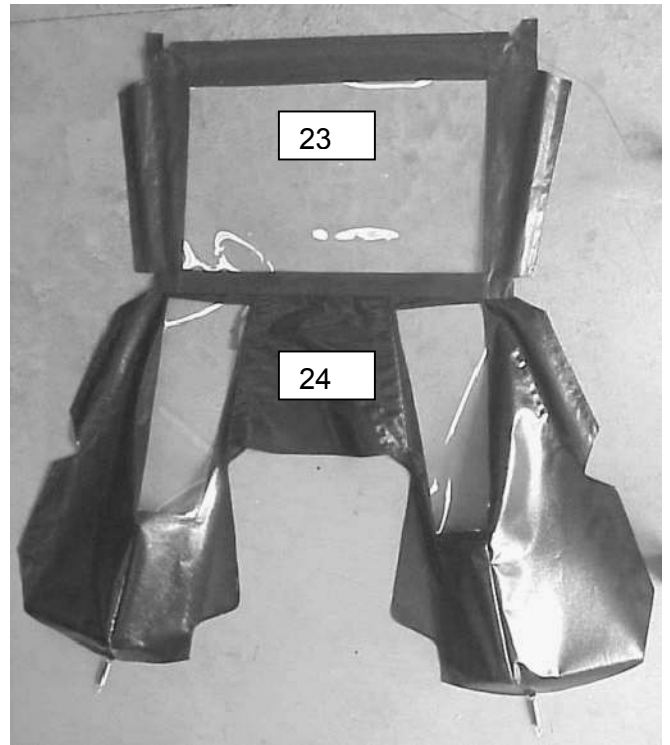


FIGURE 11

STEP 12; SEE FIGURE 12:

Install Windshield (23) and Front Panel Vinyl (24).

A. Lay the rod sewn into the top of the windshield over the top frame. Close the Velcro® flaps around the corners of the top frame.

B. Secure the ties to the cross bar and close the Velcro® flaps around the posts.

C. Hook the springs under the step plates by hooking them into the crevice between the step plate supports and the step plates.



FIGURE 12

NOTE: If a snow thrower or blower with remote spout cap kit is used install the cable assembly into the cab by following step 13.

STEP 13; SEE FIGURE 13:

Install spout cap control cable assembly.

- A.** Remove the screw and handle from the cable assembly. Remove the 1st nut from the stem.
- B.** Insert the stem through the slot in the front panel vinyl and then the bracket.
- C.** Replace the hardware and tighten.



FIGURE 13

STEP 14; SEE FIGURE 14:

Install Rear Curtain (25).

- A.** Lay the rod sewn into the rear curtain over the rear of the top frame. Close the Velcro® flaps at the corners.
- B.** Close the Velcro® flaps over the rear posts and brackets.

CAUTION!

Move the vinyl cover out of the way to fill the fuel tank. Wipe up any spilled fuel. Replace the cover over the fuel fill to help prevent fumes from entering the cab.



FIGURE 14



STEP 18; SEE FIGURE 18:

Install Doors and Top (26).

A. Install doors per the instructions in the door hardware package. Connect the Velcro® strips on the lower door & front panel.

B. Make sure that the rods sewn into the windshield and rear curtain are lying over the top frame. Place the top over the top frame with the slope towards the rear.

C. Place four 1/4" flat washers over each of four bolts. Insert bolts inwards add locknuts and tighten.



FIGURE 18

Optional Cab Accessories:

#10120 Safety Glass Windshield

#10122 Electric Wiper

9855 Flashing Amber Caution Light

#11133 Rear View Mirror, R or L Mount

#11560 Work Light Kit

