

# Original

**TRACTOR CABS**



**YESTERDAY**



**TODAY**

## #12143 Rear LED Work Light Kit

### PARTS LIST – ASSEMBLY INSTRUCTIONS

#### **IMPORTANT !**

READ THIS MANUAL CAREFULLY AND KEEP FOR FUTURE REFERENCE

#### **CAUTION !**

REMOVE THE VINYL PANELS FOR TRANSPORT IN AN OPEN TRUCK OR TRAILER


#### **⚠ WARNING ⚠**

**THIS CAB WILL NOT PROTECT OPERATOR FROM INJURIES CAUSED BY ROLLOVER, COLLISION, OR OTHER ACCIDENTS**

 **Go to our YouTube Channel and watch the Installation Video.**

## Carton Contents: #12143 Front LED Work Light Kit


	PART #	QTY.	DESCRIPTION
1	12141	1	LED Work Light
2	12067	1	13' Corrugated Loom
	12151	1	Hardware Package (contents listed below)
3	11748	1	Power Wire
4	12146	1	Harness
5	12149	1	Harness Extension
6	12148	1	Ground Wire
7	12144	1	Connectors
8	11563	1	Switch
9	9854	1	Switch Bracket
10	9699	6	Cable Ties (7 1/2")
11	788	1	1/4" x 3/4" Bolt
12	60217	1	1/4" locknut

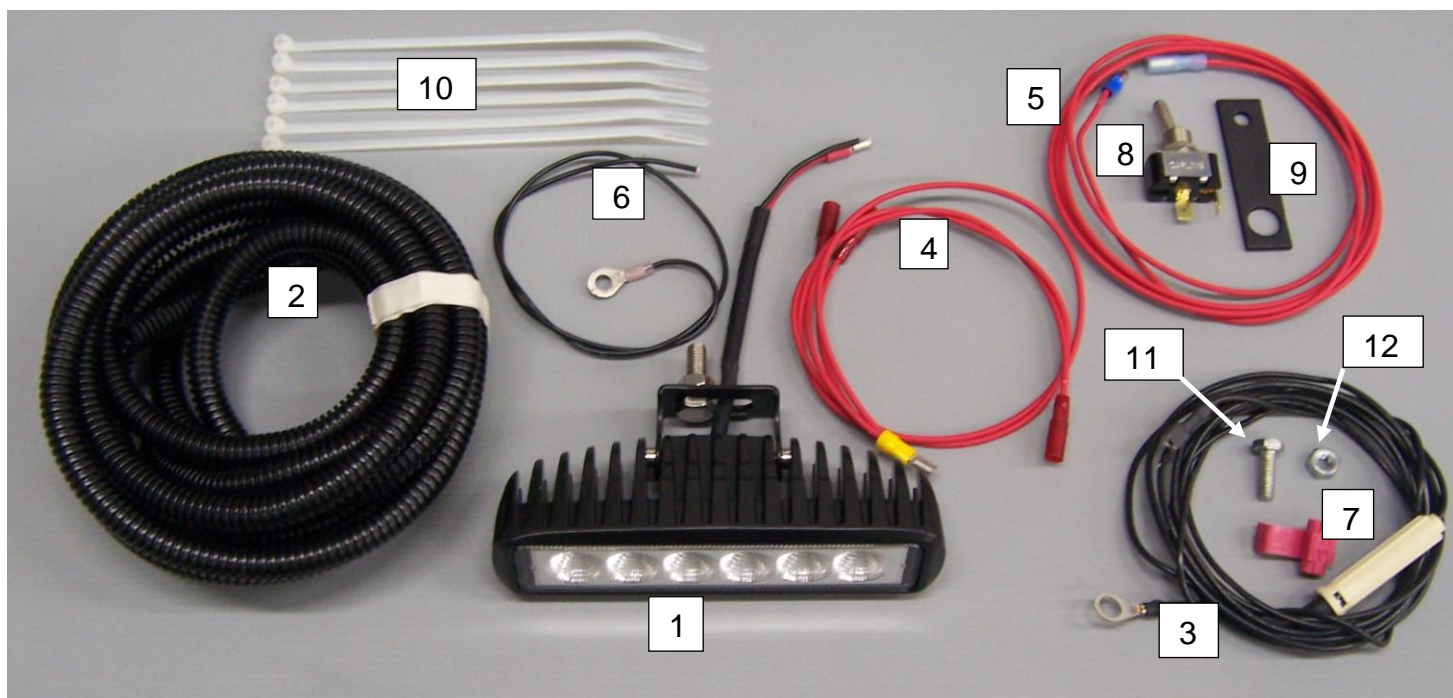

**CAUTION: Avoid injury! The battery produces a flammable and explosive gas. The battery may explode:**

- Do not smoke near battery.
- Wear eye protection and gloves.
- Remove negative cable first when disconnecting.
- Install negative cable last when connecting.

**NOTE:** If you have already installed #12142 Front LED light kit use the extra female plug outlet for this installation. This will allow one switch to operate both kits.

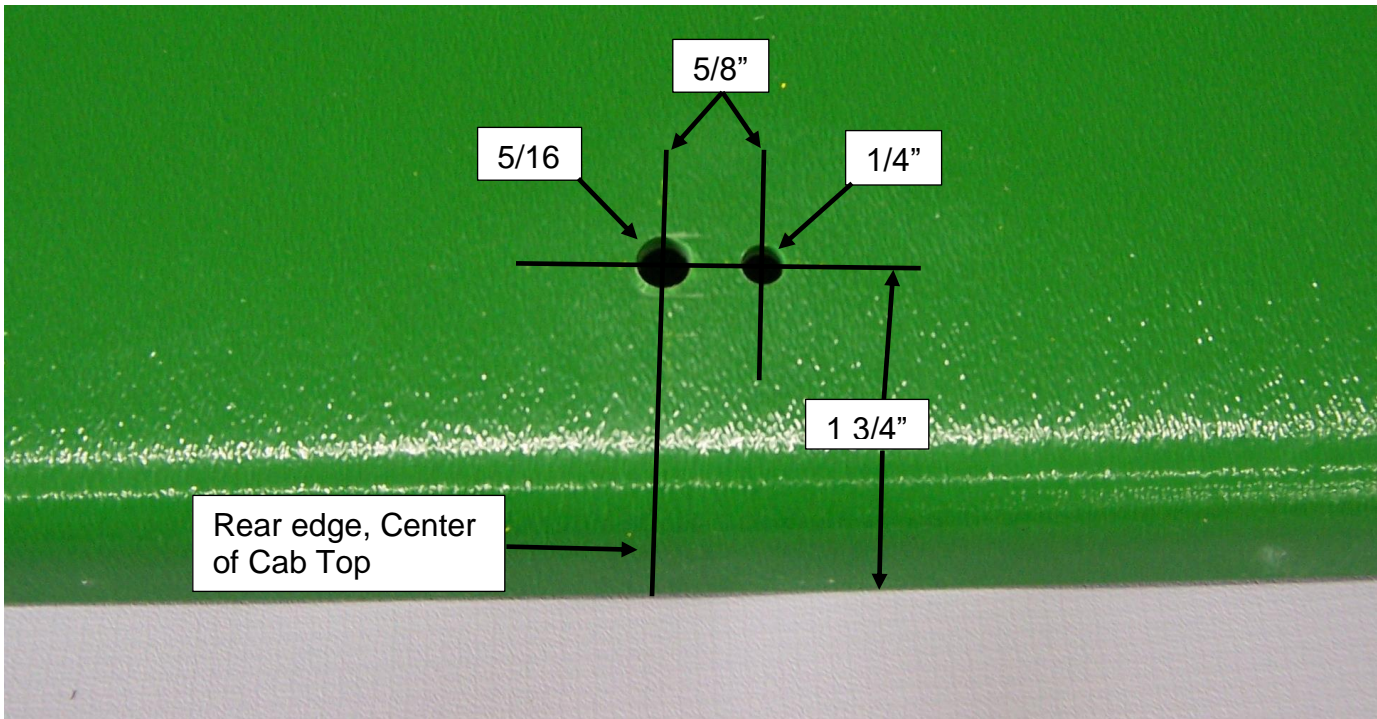

**Step 1:**

Drill holes in plastic Top to mount the Work Light **(1)**.

**A.** Measure and mark holes

**B.** Drill a 5/16" and 1/4" Holes on each side of the Top.




**Step 2;**

Attach the Light **(1)** to the Cab Top.

**A.** Assemble the light to the bracket with the wire and the bolt through the slot in the bracket.


**B.** Insert the wire and the bolt into the holes. Add the nut and washer. Do not tighten the hardware until final adjustment.

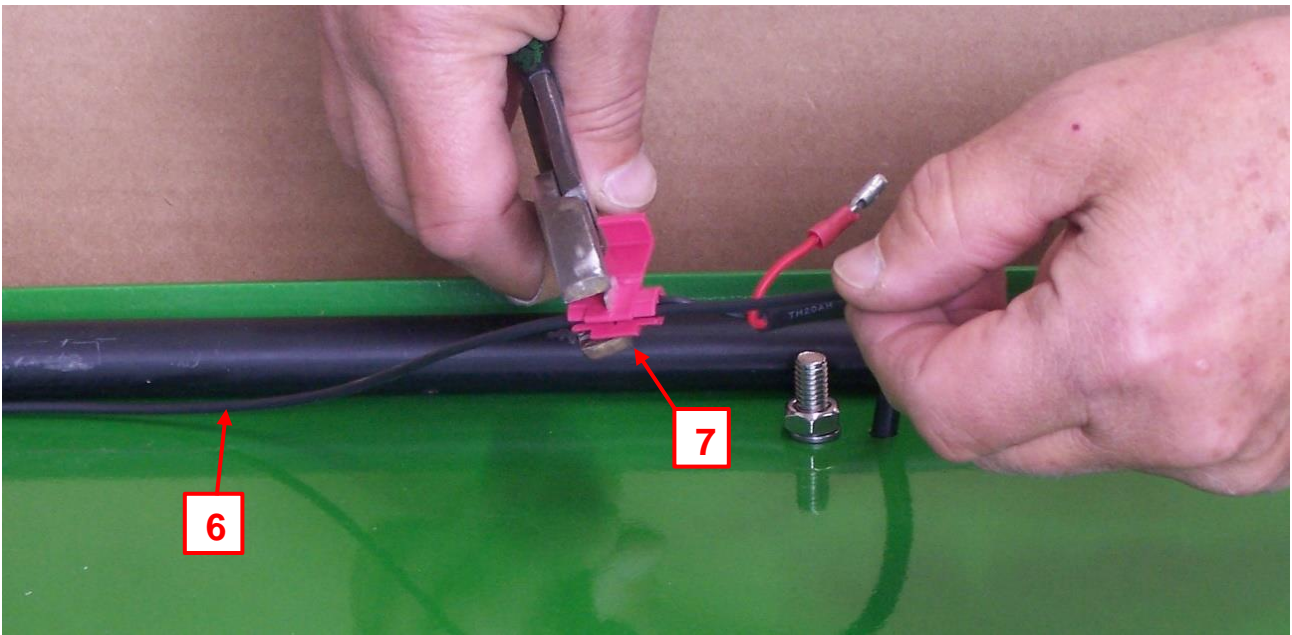

**Step 3:**

Connect the Ground Wire (6) with Connector (7).


- A. Insert the (black) ground wire from the Light and the Ground Wire into a Connector. Use pliers to close the connector.
- B. Use the nearest bolt location to attach the ring end of the Ground Wires. Tighten bolts securely to provide a good ground.

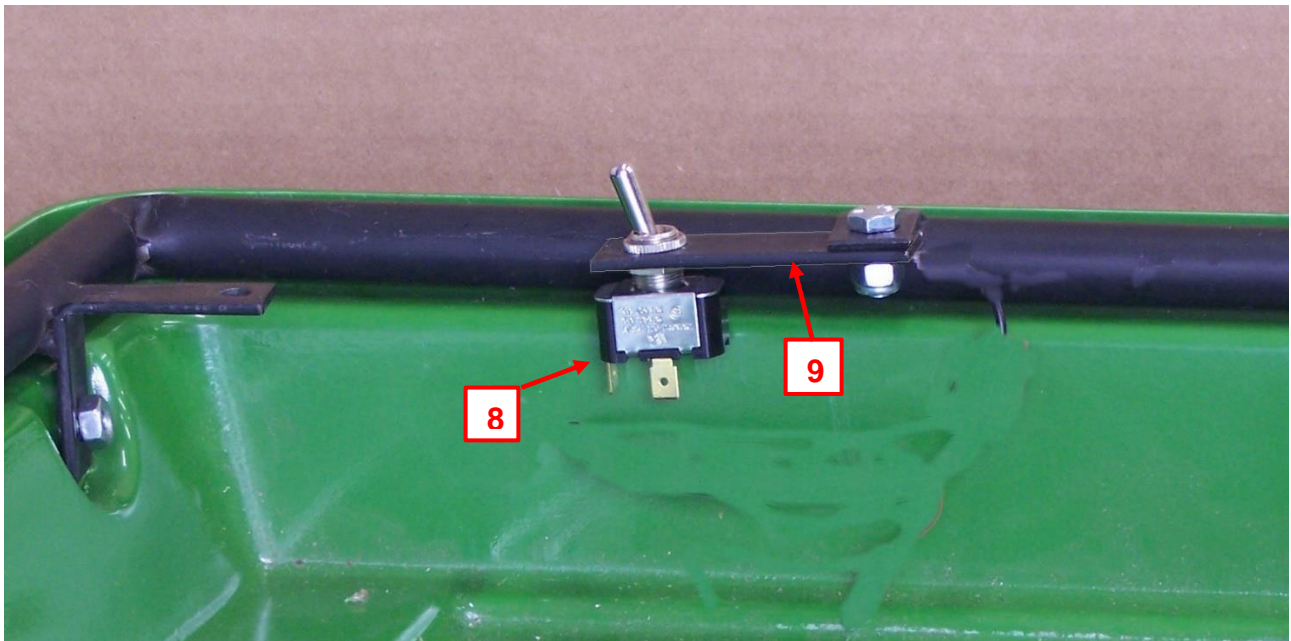

**Step 4:**

Install the Switch (8), Switch Bracket (9).

- A. Install the light switch into the large hole in the Switch Bracket. Attach the bracket to the nearest bolt location on the Top Frame.

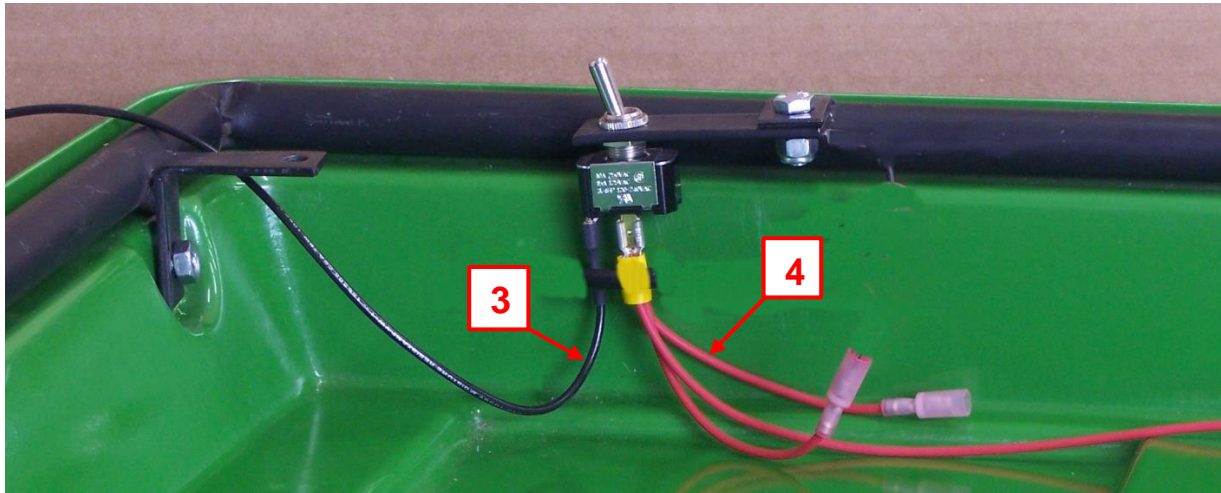

**Step 5:**

Attach the Power Supply Wire (3), the Harness (4) and the Harness Extension (5).

**A.** Connect the female spade terminal of the Harness to one of the switch terminals. Plug the Harness Extension into one of female plugs on the Harness. Plug the Rear LED Light into the female plug.

**B.** Connect the female spade terminal of the Power Supply Wire to the other switch terminal.



**Step 6:**

Place the wires in the Corrugated Loom (2).

**A.** Cut a length of Corrugated Loom long enough to cover the Wire Harness. Press the wires into the split along the side. Secure in place with the Cable Ties provided.

**B.** Cut a length of Loom long enough to cover the Power Supply Wire. Secure in place with the cable ties provided.

**C.** Run the Power Supply Wire along the frame to the battery securing it with the cable ties to keep it away from moving or hot parts of the machine.

## Step 7:

Connect Power Wire to battery.

- A. Disconnect the negative (-) battery cable. Disconnect the positive (+) battery cable and place the ring terminal of the Power Wire over the positive (+) battery terminal bolt. Replace the bolt. Add the nut and tighten.
- B. Reconnect the Negative (-) battery terminal.
- C. Adjust lights and tighten the hardware.



**CAUTION: Avoid injury! The battery produces a flammable and explosive gas. The battery may explode:**

- Do not smoke near battery.
- Wear eye protection and gloves.
- Remove negative cable first when disconnecting.
- Install negative cable last when connecting.



### Optional Cab Accessories:

#10120 Safety Glass Windshield

#10122 Electric Wiper

# 9855 Flashing Amber Caution Light

#11133 Rear View Mirror, R or L Mount

#12142 Front LED Work Light Kit

#12143 Rear LED Work Light Kit

**The Cab warranty also covers the accessories.  
For Replacement Parts and Accessories Contact:**

**Original Tractor Cab Co., Inc.**

**P.O. Box 97 6849 W. Front St.**

**Arlington, IN 46104**

**Phone 765-663-2214**

**Fax 765-663-2101**

**Email [Sales@originalcab.com](mailto:Sales@originalcab.com)**

**Visit us on the web to see our other products.**

**[www.originalcab.com](http://www.originalcab.com)**

Follow us on Facebook and Instagram.



YouTube



Instagram