



YESTERDAY



TODAY

20260 Cab for Boss Snowrator

PARTS LIST – ASSEMBLY INSTRUCTIONS

IMPORTANT!

READ THIS MANUAL CAREFULLY AND KEEP FOR FUTURE REFERENCE
THE RIGHT SIDE OF THE CAB IS DETERMINED FROM THE OPERATOR'S
POSITION

CAUTION!

REMOVE THE VINYL COVER FOR TRANSPORT IN AN OPEN TRUCK OR
TRAILER



WARNING



1. This cab is designed to provide foul weather protection only. It does not provide protection from noise, exhaust fumes, chemicals or injury from collision, rollover or other accidents.
2. Do not operate machine in confined areas without proper ventilation.
3. Thoroughly check area of operation before using machine.
4. The cab adds height to the machine. Low tree limbs and other overhead structures that did not interfere with the operation of the machine before, may now be obstacles.

MAINTENANCE INSTRUCTIONS

- A. Periodically check all bolts to see that they are tight. If bolts become loose, failure of cab parts may occur.

**DO NOT CLEAN THE CLEAR PLASTIC WINDOWS WHEN THE PLASTIC IS DRY.
THE CLEAR PLASTIC WILL SCRATCH.**

- B. Avoid contact with plastic windows. Keep plastic windows clean by washing them with clear running water and rubbing with your bare hands, only. The use of a rag, sponge or brush will scratch the plastic. Liquid soap may also be used for window cleaning. During freezing weather, an automotive windshield washer solvent may be used.
- C. Use liquid soap and water to clean colored vinyl portions. Scrubbing with a brush or rag is also permitted on the colored vinyl portions.

STORAGE INSTRUCTIONS

Prior to storage clean the windows and colored vinyl parts with a mild automotive detergent, rinse with clean water and allow to thoroughly dry, Store cab in a clean dry place out of direct sunlight. Avoid folding plastic windows.

LIMITED WARRANTY SNOW REMOVAL EQUIPMENT CABS

COVERED BY WARRANTY

ORIGINAL TRACTOR CAB CO., INC., (the "Company") warrants to the owner that each new product listed below is merchantable and free of defects in workmanship and material.

During the warranty period, the dealer from whom the product was bought, or the Company, will provide, free of charge, parts and the shipping costs of parts necessary to correct any defect in workmanship and material.

WARRANTY PERIOD

The company products listed below are warranted for the stated period from the date of the original purchase:

- | | |
|--|--------|
| 1. Cabs for tractors and snow removal equipment | 1 Year |
| 2. Company manufactured accessories for above cabs | 1 Year |
| 3. Sunshades for lawn and garden tractors | 1 Year |
| 4. Repair parts | 1 Year |

OWNER'S RESPONSIBILITIES

The owner of a new Company manufactured product must do the following to qualify for warranty service :

1. Retain the original invoice or other proof of purchase to avoid unnecessary difficulties in determining eligibility for warranty work.
2. Notify the dealer from whom the product was bought, or the company, as soon as possible after discovery of a possible defect, and provide proof of original purchase.
To notify the company write to: Original Tractor Cab Co., Inc., P.O. Box 97, Arlington, IN 46104.
3. The owner may , upon notification by the Company, be required to return the defective part, or parts, to the Company for inspection and warranty service.

NOT COVERED BY WARRANTY

The following are not covered by this warranty:

1. Transportation charges to and from servicing dealer or the Company;
2. New products which have been subject to misuse, negligence or accident, or have been altered or repaired in a manner not authorized by the company;
3. Windshield wipers, lights, or accessories that are warranted separately by their respective manufacturers, except Company agrees to make available to the owner whatever warranty benefits may be made available to the Company by the manufacturers.

All implied warranties, except to the extent prohibited by any applicable law, shall have no greater duration than the warranty period for the applicable product, some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

The Companys' liability arising out of warranties representation, instructions, or defects from any abuse, shall be limited exclusively to repair or replacing parts under the condition in the warranty, and in no event will Company be liable for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have rights, which vary from state to state.


CARTON CONTENTS CAB MODEL #20260 for “SnowRator” Model #SNR24003

PART #	KEY #	QTY	DESCRIPTION
20261	1	1	Front Mount
20262	2	1	Rear Mount, RH
20263	3	1	Rear Mount, LH
20264	4	2	Side Frame
20265	5	2	Straight Tab Cross Bar
20266	6	2	Bent Tab Cross Bar
20267	7	2	Short Connecting Bar
20268	8	1	Curved Side Bar, RH
20278	9	1	Curved Side Bar, LH
20269	10	1	Cab Shell
20276	11	1	Rear Post, RH
20277	12	1	Rear Post, LH
20270	13	1	Cab Skirt, RH
20271	14	1	Cab Skirt, LH
20275	15	1	Front Light Cover
20272		1	Foam Padding
20274		1	Storage Bag
20273		1	Hardware Package (contents listed below)
786		4	1/4"-20 x 5/8" Bolt
788		6	1/4"-20 x 3/4" Bolt
926		2	1/4"-20 x 1" Bolt
2186		2	1/4"-20 x 1 1/4" Bolt
9660		2	1/4"-20 Whiz Locknut
60217		12	1/4"-20 Nylock Nut
1514		2	1/4" Flat Washer
4723		4	5/16"-18 1 3/4" Carriage Bolt
9842		4	5/16-18 Whiz Locknut


Tools Required:

7/16" Socket and Wrench
1/2" Socket
3/8" Wrench
Ratchet Wrench
Ratchet Extension

Use the Figure below to identify the steel parts

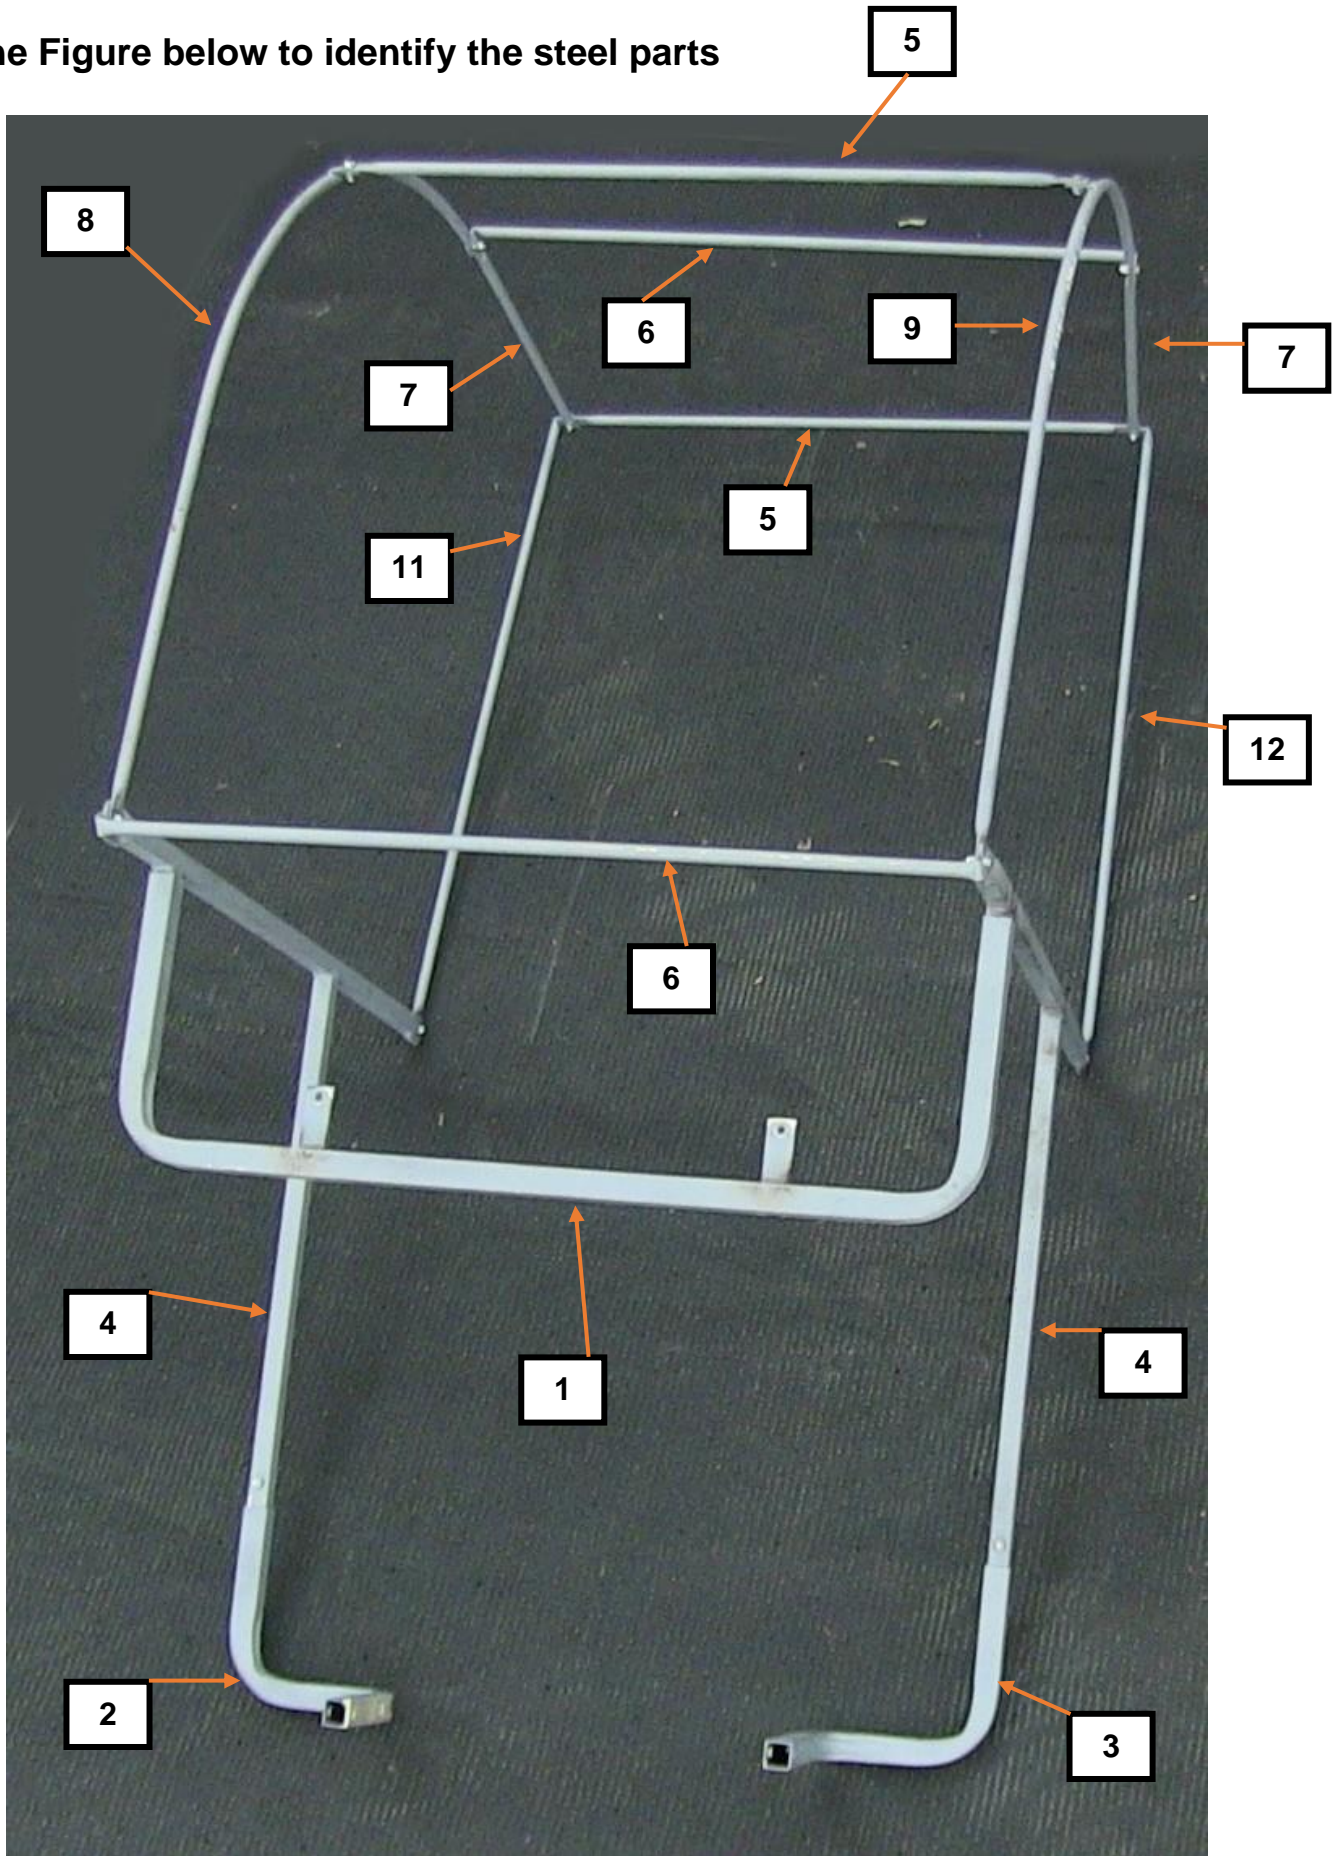

Use the Figure below to identify the hardware

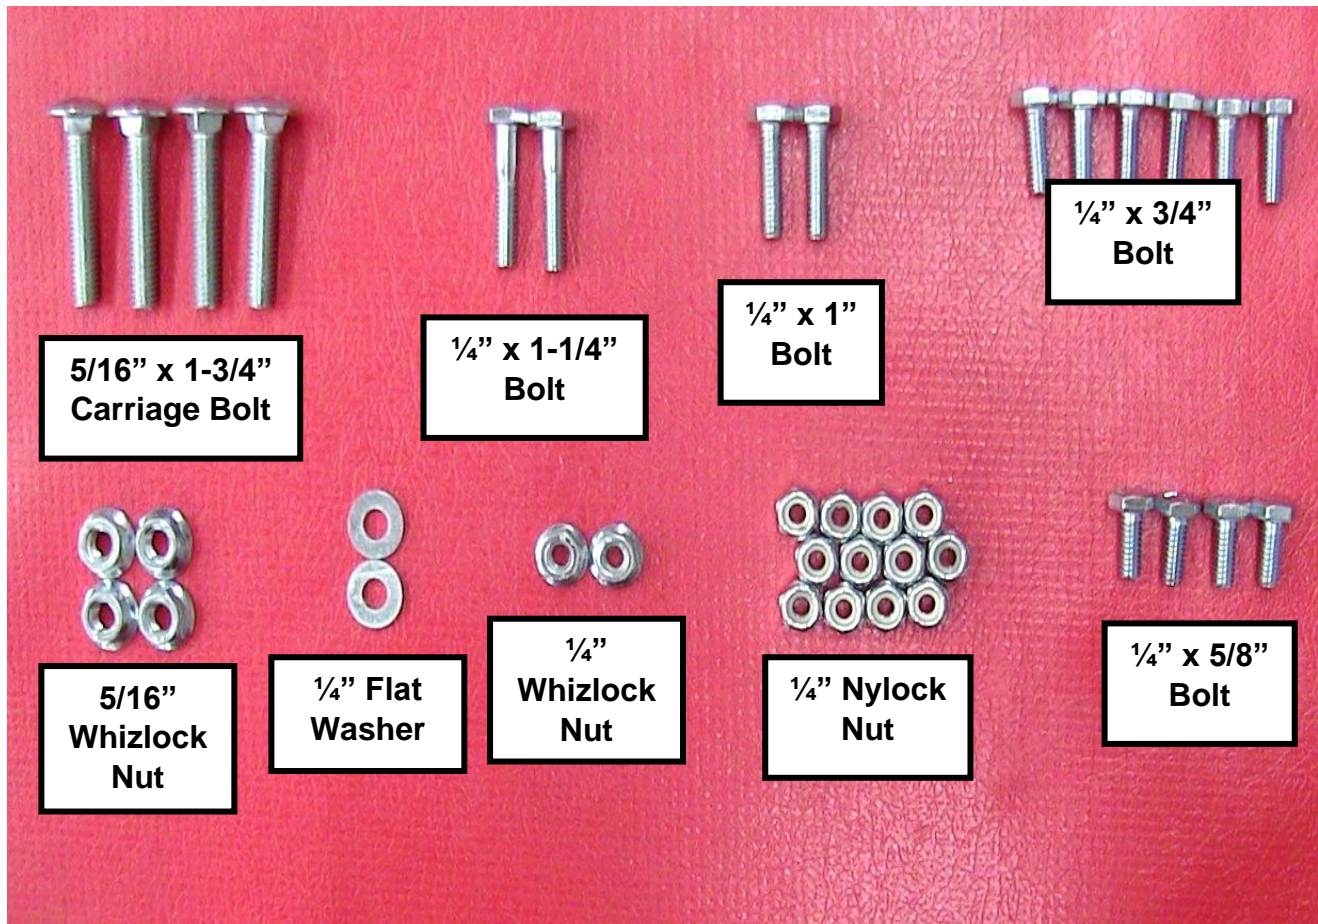

Step 1; See Figure 1, 1A and 1B:

Install Front Mount (1)

A. Remove the pad shown in Figure 1.

B. Using a 3/8" Wrench and a 7/16" Socket, remove the hardware shown at Reference A in Figure 1A.

C. Place flat washers onto the two 1/4"-20 x 1" bolts then insert the bolts outward at Reference A.

D. Install the Front Mount onto the bolts then add two 1/4" whizlock nuts. Fully tighten the nuts.



Figure 1

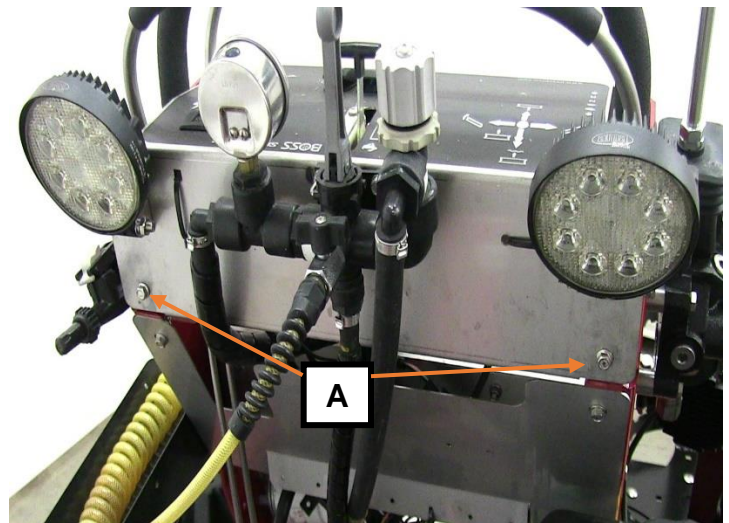


Figure 1A

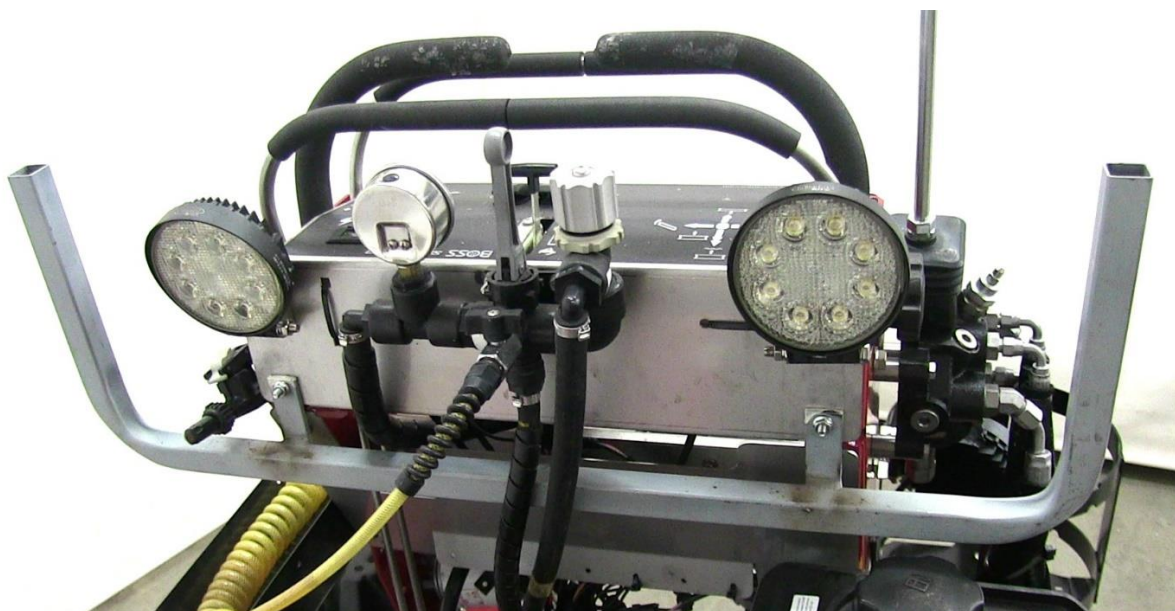


Figure 1B

Step 2; See Figure 2, 2A and 2B:
Install Rear Mount RH & LH (2&3)

A. Using a $\frac{1}{2}$ " socket, remove the nuts and bolts at Reference B.

B. Place two $\frac{5}{16}$ " x $1\frac{3}{4}$ " bolts out through the bolt holes then place the LH Rear Mount over the bolts. Add two $\frac{5}{16}$ " whizlock nuts but do not fully tighten them.

C. Repeat for the right side. For ease of installation, you can remove the battery box from the right hand side.

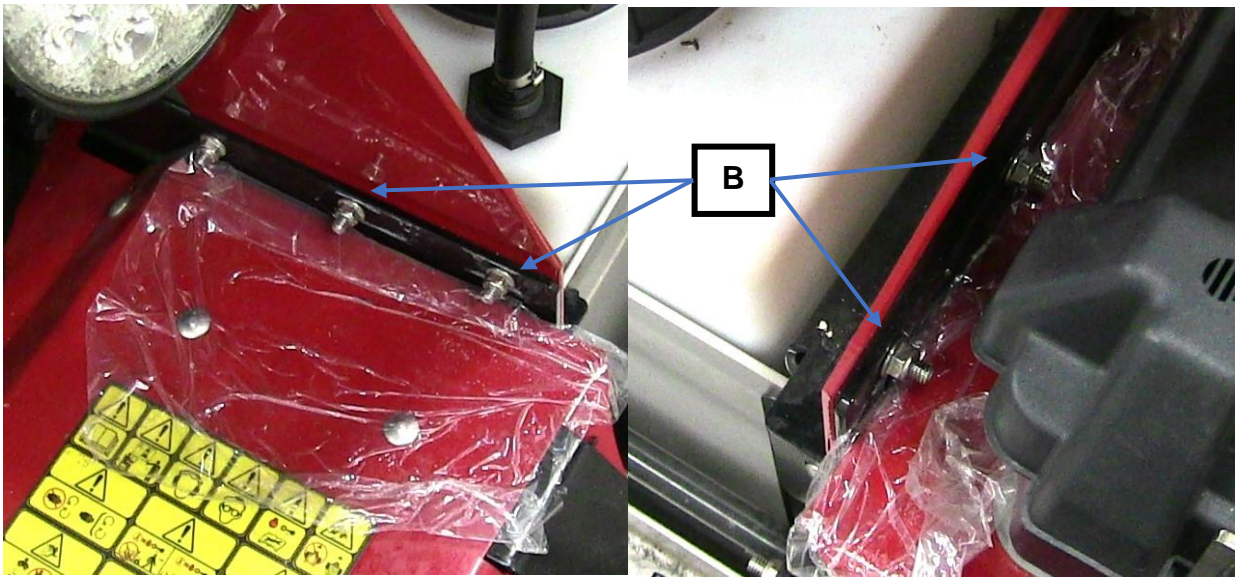


Figure 2



Figure 2A



Figure 2B

Step 3; See Figure 3 and 3A:
Install the Side Frames (4)

A. Place a 1/4" x 1-1/4" bolt through the hole in the Side Frame post as shown in Figure 3 then add a nylock nut and fully tighten it.

B. Place the Side Frame into the receivers as shown in Figure 3A.

C. Repeat for the right side.

D. Tighten the nuts left loose in the previous step.

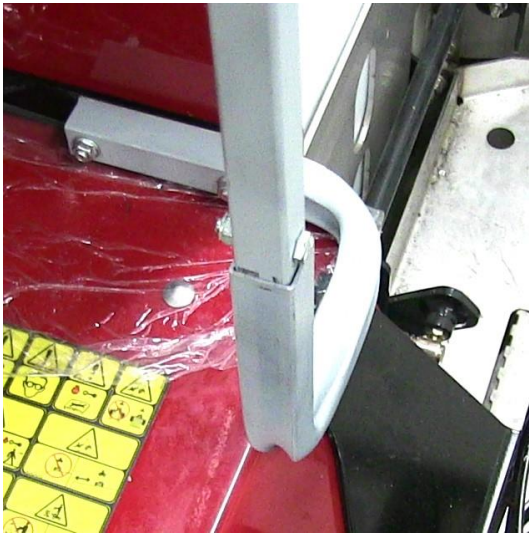


Figure 3



Figure 3A

Step 4; See Figure 4 and 4A:
Install Rear Post RH & LH (11 & 12)

A. Place a 1/4" x 5/8" Bolt through the LH Rear Post then the hole at the back of the Side Frame as shown in Figure 4. Add a nylock nut and tighten enough to hold the post upright.

B. Repeat for the right side.

Note: The Rear Post should be angled backward to where the tab will be parallel with the ground as shown in Figure 4A.



Figure 4



Figure 4A

Step 5; See Figure 5 and 5A:

Install the Curved Side Bar RH & LH (8 & 9) and a Bent Tab Cross Bar (6)

A. Insert a $\frac{1}{4}$ " x $\frac{3}{4}$ " bolt through the Bent Tab Cross Bar, the Side Frame then the Curved Side Bar LH as shown in Figure 5. Add a nylock nut and tighten just enough to hold the Side Bar in Place as shown in Figure 5A.

B. Repeat for the right side.

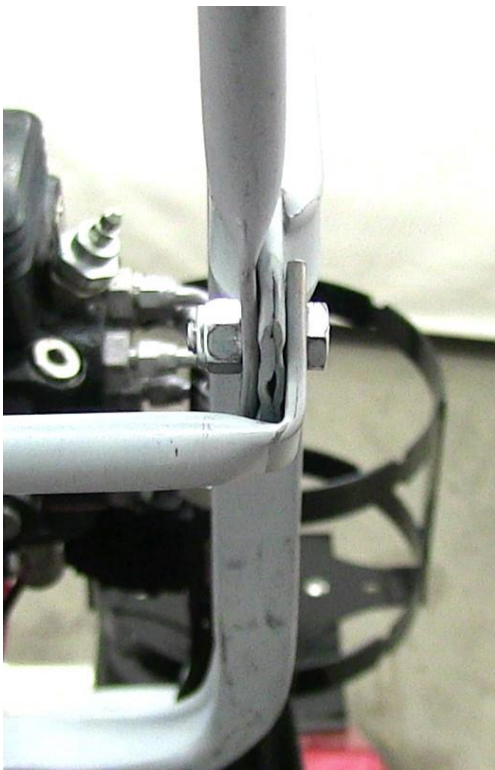


Figure 5

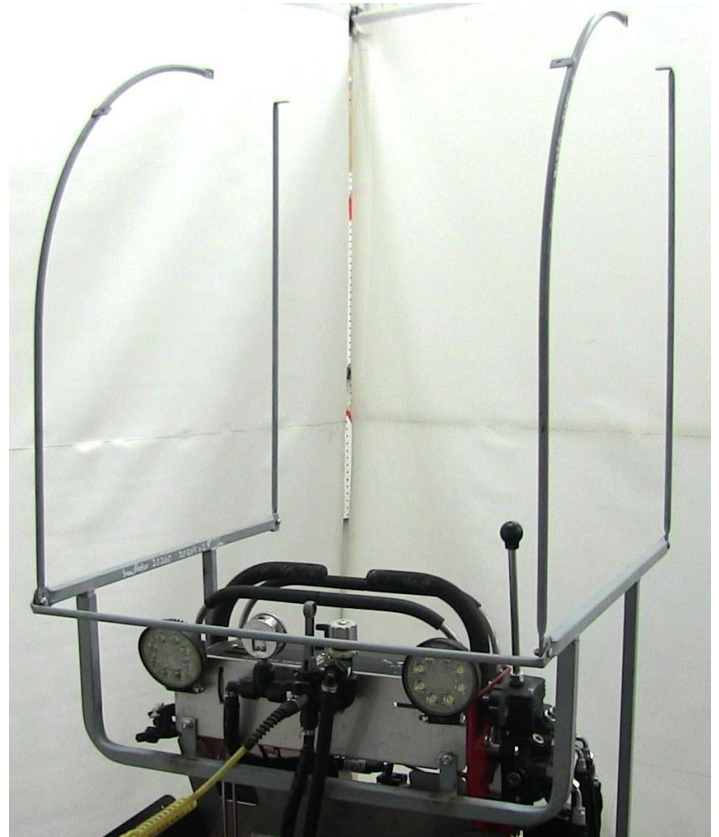


Figure 5A

Step 6; See Figure 6:

Install the Short Connecting Bars (7) and a Straight Tab Cross Bar (5)

A. Place a $\frac{1}{4}$ " x $\frac{3}{4}$ " bolt down through the Straight Tab Cross Bar, the LH Rear Post then the Short Connecting Bar. Add a nylock nut but do not fully tighten.

B. Repeat for the Right Side.



Figure 6



Figure 7



Figure 7A

Step 7; See Figure 7, 7A and 7B:

Install a Bent Tab Cross Bar (6)

A. Insert a $\frac{1}{4}$ " x $\frac{3}{4}$ " bolt through the Bent Tab Cross Bar, the LH Curved Side Bar then the Short Connecting Bar as shown in Figure 7. Add a nylock nut and tighten enough to hold the parts as shown in Figure 7A.

B. Repeat for the right side.



Figure 7B

Step 8; See Figure 8 and 8A:

Install a Straight Tab Cross Bar (5) and the Foam Padding

A. Insert a $\frac{1}{4}$ " x $\frac{5}{8}$ " bolt through each end of the Straight Tab Cross Bar then the tabs on the Curved Side Bars as shown in Figure 8. Add nylock nuts and fully tighten.

B. Tighten all the bolts left loose in previous steps at this time.

C. Place the Foam Padding onto the frame as shown in Figure 8A.



Figure 8



Figure 8A

Step 9; See Figure 9 and 9A:

Install the Front Light Cover (15)

A. Wrap the Front Light Cover around the Cross Bar as shown in Figure 9.

B. Place the Covers over the lights as shown in Figure 9A.



Figure 9

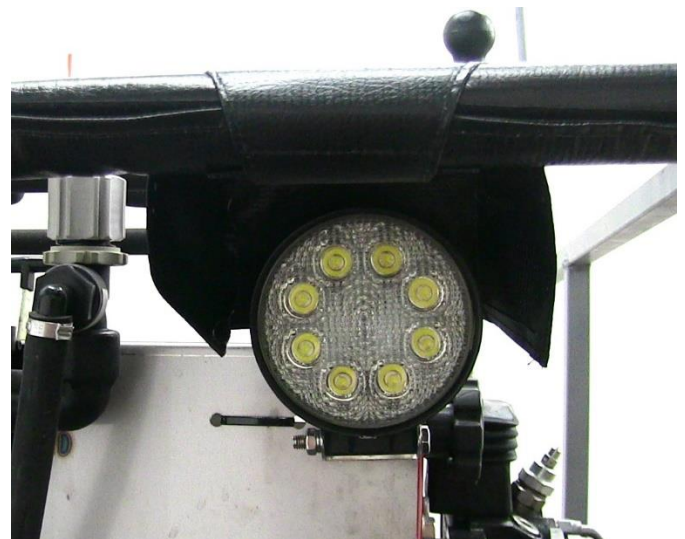


Figure 9A

Step 10; See Figure 10, 10A, 10B and 10C:

Install the Cab Shell (10)

A. Place the Cab Shell over the Frame as shown in Figure 10.

B. Close the velcro flaps over the Bent Tab Cross Bar, Rear Posts and Side Frames as shown in Figure 10A, 10B and 10C.



Figure 10



Figure 10A



Figure 10B



Figure 10C

Step 11; See Figure 11, 11A and 11B:
Install the Cab Skirt RH & LH (13 & 14)

A. Attach the velcro on the LH Cab Skirt to the velcro flaps on the side and front of the Cab Shell as shown in Figure 11.

B. Attach the springs from the LH Cab Skirt to the machine as shown in Figure 11A.

C. Repeat for the right side.



Figure 11

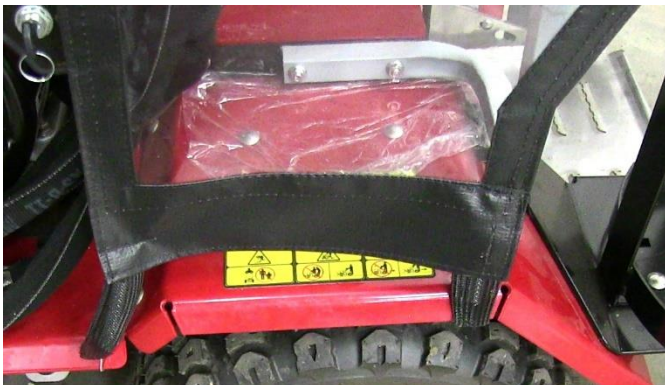


Figure 11A



Figure 11B



For Replacement Parts and Accessories Contact:

Original Tractor Cab Co., Inc.

P.O. Box 97 6849 W. Front St.

Arlington, IN 46104

Phone 765-663-2214

Fax 765-663-2101

Email Sales@originalcab.com

Visit us on the web to see our other products.

www.originalcab.com

**Cabs for Lawn Tractors, Garden Tractors, Compact Tractors, Snow Blowers,
Sunshades for Tractors, Mowers, & Utility Vehicles**